 
 



ENGLISH

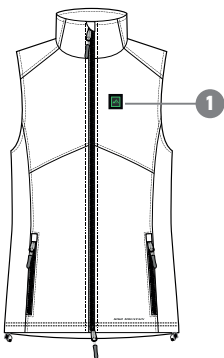

7523 Östersund

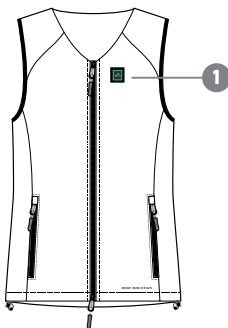

 7524/7549 Narvik

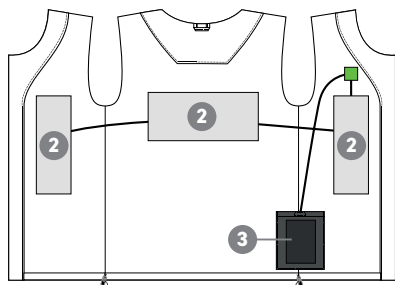

- 1 Button
- 2 Heating panels
- 3 Pocket for powerbank

Specification

Article no	Weight	Voltage	Input
7523	Women: 530g, Men: 615g	5V	DC5V, 2A
7524	Women: 465g, Men: 540g	5V	DC5V, 2A
7549	Children: 365g	5V	DC5V, 2A

How to use

Connect the USB-cable to the powerbank and place it in the pocket.

To activate the vest's heating panels, press and hold the button for a few seconds until the button lights up. You can then switch between three temperature settings by pressing the button. Hold down the button to turn off the heat.



Green • Low temperature



Blue • Medium temperature



Red • High temperature

Approx. Operating time

Powerbank • 10 000mAh	
Low temp	8 hours
Medium temp	5 hours
High temp	3 hours

Care instructions

Remove the powerbank before washing. Put the protection cover on the USB-cable and place it in the pocket. Hand wash only, maximum 40°C. Do not use fabric softener. Dry flat or hanging. Do not tumble dry or use drying cabinet.



Do not throw the product in the household waste, sort as electronics.



Användarmanual User manual

 
VÄRMEVÄST/HEATED VEST ÖSTERSUND Art 7523

VÄRMEVÄST/HEATED VEST NARVIK Art 7524


VÄRMEVÄST/HEATED VEST NARVIK BARN/KIDS Art 7549




SVENSKA

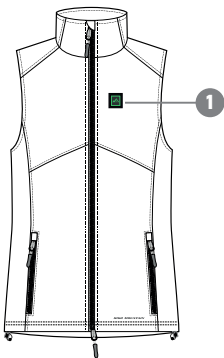

7523 Östersund

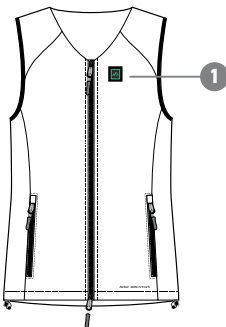 

7524/7549 Narvik

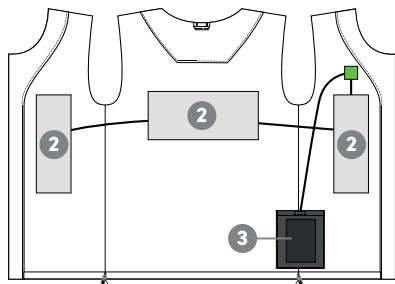 

- 1 Knapp
- 2 Värmepanel
- 3 Ficka för powerbank

Specifikation

Artikelnr	Vikt	Spänning	Ingång
7523	Dam: 530g, Herr: 615g	5V	DC5V, 2A
7524	Dam: 465g, Herr: 540g	5V	DC5V, 2A
7549	Barn: 365g	5V	DC5V, 2A

Användning

Anslut västens USB-kontakt till din powerbank och placera powerbanken i den lilla förvaringsfickan.

För att starta västens värmepaneler håller du in knappen i ett par sekunder tills knappen lyser. Du kan därefter växla mellan tre temperaturlägen genom knapptryckningar. Håll in knappen för att stänga av värmen.



Grönt sken • Låg temp



Blått sken • Mellantemp



Rött sken • Hög temp

Ungefärlig drifttid

Powerbank • 10 000mAh	
Låg temp	8 timmar
Mellantemp	5 timmar
Hög temp	3 timmar

Tvättråd

Ta ur powerbanken före tvätt. Sätt på skyddet till USB-sladden som sitter på sladden. Stoppa ner sladden i fickan och stäng kardborren. Tvätta för hand i max 40°C. Använd inte sköljmedel. Torka plant eller hängande. Får inte torktumlas eller torka i torkskåp.

Produkten får ej slängas i hushållssoporna, sorteras som elektronik.



ENGELSONS

Engelsons AB
Kanslistvägen 6
311 39 Falkenberg
SWEDEN
0346-71 38 40
engelsons.se